
Datalight FlashFX Pro 4.1 User Manual

General Description and Name

This BBM works for Datalight FlashFX Pro system V4.1. It works a little differently than the previous BBM for Datalight FlashFX Pro system which has ECC to protect the BBM header data.

Relevant User Options

The following special features on the Special Features tab apply to this scheme. The default values might work in some cases, but please make sure to set the right value according to your system.

Please note that only the two special feature items below are related to this scheme; ignore any others. If either of the items below doesn't exist, please check if the right version has been installed, or contact Data I/O for support by submitting a Device Support Request through this address: <http://www.dataio.com/support/dsr.asp>

Bad Block Handling Type = Datalight FlashFX Pro 4.1

Spare area = *Normally set as "Enabled" for this BBM.* [Default 'Disabled']
Please refer to "Description of common NAND special features.pdf".

Special Notes:

Customer needs to prepare the data file with spare area data.

Revision History

V1.1 October 5, 2011

Appendix

You can get the file "Description of common NAND special features.pdf" from <http://ftp.dataio.com/FCNotes/BBM/>